RadioShack®

61-3002

Lamp Module

Thank you for purchasing your Lamp Module from RadioShack. You can control your home's lamps with the touch of a button. For added convenience, extra lamp modules allow you to add additional lights for expanding your home automation system.

setting your module's codes

❶ Using a small screwdriver, set your module's red House Code dial to the same letter as your Controller.

❷ Set the Black Unit Code dial to any unused number.

connecting your module

❶ Plug your lamp's AC cord into the module.

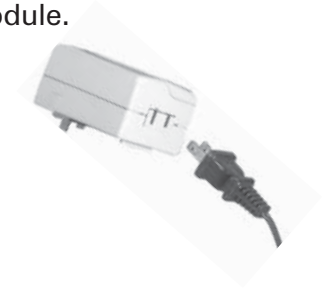

❷ Plug your module into the same wall outlet as your Controller.

Tip Use the bottom plug for your module and the top plug for your controller.

Please read this User's Guide before installing, setting up, and using your new product.
www.radioshack.com

testing your module

❶ To test your module, make sure the lamp's switch is on and plug the module into the same wall outlet as your Controller.

❷ Press the Controller's **On** and **Off** buttons that correspond to the Unit Code setting on your lamp module.

❸ If your module turns on and off, move the Controller and your module to their permanent location.

❹ If your module does not work, try plugging your Controller into another location, or visit your local RadioShack store for assistance.

important reminders

- Your lamp module only can be used to control an incandescent lamp rated up to 300W. It is not suitable for other types of lamps, such as fluorescent or energy saving lamps, low voltage lamps, or lamps that include a dimmer control.
- Do not connect an appliance to a lamp module. It may damage the lamp module and/or appliance, and could cause a fire hazard. Use an appliance module instead.

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.
⚠ RISK OF ELECTRIC SHOCK. DO NOT OPEN. ⚠
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.
This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case. ⚠
This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product. ⚠

©2004. RadioShack Corporation.
All rights reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

61-3002
06A04
Printed in China